


Select a Pattern **Supersixxxxxx Nykoping 2005**

Forward Oil Total **13.84** ml Forward Boards Crossed **346**

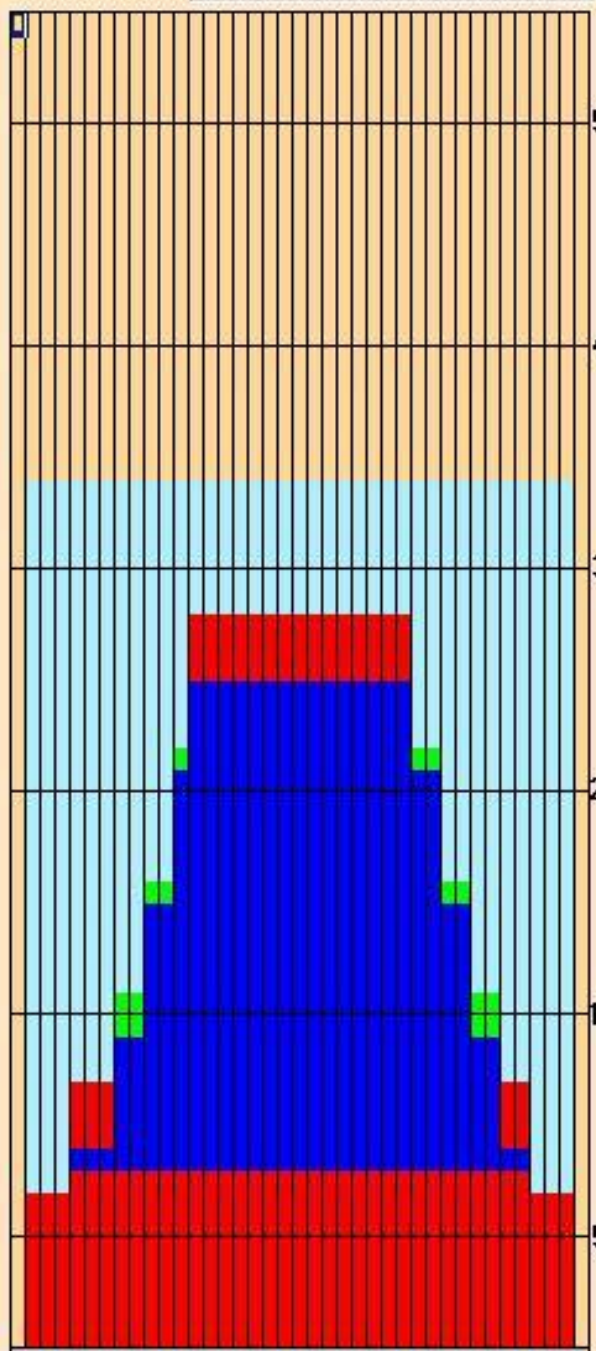

	Start	Stop	Loads	Speed	Crossed	Start	End	Feet	T Oil
1	2L	2R	4	14	148	0	7	7	5920
2	5L	5R	2	18	62	7	12	5	2480
3	8L	7R	1	18	26	12	14	2	1040
4	10L	9R	2	22	44	14	20	6	1760
5	12L	11R	2	22	36	20	26	6	1440
6	13L	13R	2	26	30	26	33	7	1200
7	2L	2R	0	26	0	33	39	6	0
8									
9									
10									
11									
12									
13									
14									
15									

Reverse Oil Total **8.16** ml Reverse Boards Crossed **204**

	Start	Stop	Loads	Speed	Crossed	Start	End	Feet	T Oil
1	2L	2R	0	22	0	39	30	-9	0
2	13L	13R	1	22	15	30	27	-3	600
3	12L	11R	2	22	36	27	21	-6	1440
4	10L	9R	2	18	44	21	16	-5	1760
5	8L	7R	3	18	78	16	9	-7	3120
6	5L	5R	1	14	31	9	8	-1	1240
7	2L	2R	0	14	0	8	0	-8	0
8									
9									
10									
11									
12									
13									
14									
15									

**Print Pattern** **Help**

Oil Per Board

Oil Pattern Distance

Volume Oil Total  ml

Total Boards Crossed

Double Click to change a Color on the graph.

- "Forward Oil"
- "Reverse Oil"
- "Combined Oil"
- "Buff Area"

Select a Pattern Supersixxxxxx Nykoping 2005

Ratio of Oil from 20 Board to Displayed Board							
20:2L	20:5L	20:10L	20:15L	20:15R	20:10R	20:5R	20:2R
5,50	3,14	1,47	1,00	1,00	1,47	3,14	5,50

Print Pattern Help

Selection 1  Selection 2  Ratio

Oil Per Board 40 Forward Oil Total 13,84 mL Reverse Oil Total 8,16 mL Volume Oil Total 22 mL Oil Pattern Distance 39

